

ASCII Conversion Chart / Code page 1252

Lower part (Characters 0-127)

Table for lower ASCII characters and their Hexadecimal equivalent, used for scanning programming features.

The lower Part of both Codepage 1252 and the standard ASCII table are identical

Note: The left column, dec. character 0-31 (and character 127), are 'un-printable' ASCII Control characters.

Dec	Hex	Char									
0	00	NUL	32	20		64	40	@	96	60	4
1	01	SOH	33	21	!	65	41	Α	97	61	a
2	02	STX	34	22	"	66	42	В	98	62	b
3	03	ETX	35	23	#	67	43	С	99	63	С
4	04	EOT	36	24	\$	68	44	D	100	64	d
5	05	ENQ	37	25	%	69	45	Е	101	65	е
6	06	ACK	38	26	&	70	46	F	102	66	f
7	07	BEL	39	27		71	47	G	103	67	g
8	08	BS	40	28	(72	48	Н	104	68	h
9	09	HT	41	29)	73	49	T	105	69	i
10	0A	LF	42	2A	*	74	4A	J	106	6A	j
11	0B	VT	43	2B	+	75	4B	K	107	6B	k
12	0C	FF	44	2C	,	76	4C	L	108	6C	1
13	0D	CR	45	2D	-	77	4D	М	109	6D	m
14	0E	SO	46	2E		78	4E	N	110	6E	n
15	0F	SI	47	2F	1	79	4F	0	111	6F	0
16	10	DLE	48	30	0	80	50	Р	112	70	р
17	11	DC1	49	31	1	81	51	Q	113	71	q
18	12	DC2	50	32	2	82	52	R	114	72	r
19	13	DC3	51	33	3	83	53	S	115	73	S
20	14	DC4	52	34	4	84	54	Т	116	74	t
21	15	NAK	53	35	5	85	55	U	117	75	u
22	16	SYN	54	36	6	86	56	٧	118	76	V
23	17	ETB	55	37	7	87	57	W	119	77	W
24	18	CAN	56	38	8	88	58	Х	120	78	X
25	19	EM	57	39	9	89	59	Υ	121	79	у
26	1A	SUB	58	зА	:	90	5A	Z	122	7A	Z
27	1B	ESC	59	3B	;	91	5B	[123	7B	{
28	1C	FS	60	зС	<	92	5C	١	124	7C	1
29	1D	GS	61	3D	=	93	5D]	125	7D	}
30	1E	RS	62	3E	>	94	5E	۸	126	7E	~
31	1F	US	63	3F	?	95	5F	_	127	7F	

NOTE: Characters in bar codes used in keyboard applications may appear different on the host system, depending on regional keyboard layout and regional character interpretations and scanner configuration.

This is an entry from the Honeywell Scanning & Mobility Knowledge base. As part of our ongoing effort to improve and enhance the quality of the solutions, we ask you to inform us if you feel that we can improve on the content of this solution.

Support Portal: <u>www.hsmsupportportal.com</u> - Web form: <u>www.hsmcontactsupport.com</u> Knowledge Base: <u>www.hsmknowledgebase.com</u> - Phone: <u>www.honeywellaidc.com/locations</u>



Code page 1252

Upper part (Characters 128-255)

Table for upper Code Page 1252 characters and their Hexadecimal equivalent, used for scanning programming features.

The upper part of Codepage 1252 and the standard ASCII table are different

Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char
128	80	€	160	A0		192	C0	À	224	E0	à
129	81		161	A1	i	193	C1	Á	225	E1	á
130	82	,	162	A2	¢	194	C2	Â	226	E2	â
131	83	f	163	АЗ	£	195	Сз	Ã	227	E3	ã
132	84	22	164	A4	α	196	C4	Ä	228	E4	ä
133	85		165	A5	¥	197	C5	Å	229	E5	å
134	86	†	166	A6	1	198	C6	Æ	230	E6	æ
135	87	‡	167	A7	§	199	C7	Ç	231	E7	ç
136	88	^	168	A8		200	C8	È	232	E8	è
137	89	‰	169	A9	©	201	C9	É	233	E9	é
138	8A	Š	170	AA	<u>a</u>	202	CA	Ê	234	EA	ê
139	8B	¢	171	AB	ec .	203	CB	Ë	235	EB	ë
140	8C	Œ	172	AC	¬	204	CC	Ì	236	EC	ì
141	8D		173	AD	-	205	CD	ĺ	237	ED	Í
142	8E	Ž	174	AE	®	206	CE	Î	238	EE	î
143	8F		175	AF	-	207	CF	Ĭ	239	EF	Ï
144	90		176	B0	0	208	D0	Ð	240	F0	ð
145	91		177	B1	±	209	D1	Ñ	241	F1	ñ
146	92	,	178	B2	2	210	D2	Ò	242	F2	ò
147	93	"	179	В3	3	211	D3	Ó	243	F3	ó
148	94	"	180	B4	*	212	D4	Ô	244	F4	ô
149	95	•	181	B5	μ	213	D5	Õ	245	F5	õ
150	96	-	182	B6	1	214	D6	Ö	246	F6	Ö
151	97	_	183	B7		215	D7	×	247	F7	÷
152	98	~	184	B8		216	D8	Ø	248	F8	Ø
153	99	TM	185	B9	1	217	D9	Ù	249	F9	ù
154	9A	š	186	BA	۷	218	DA	Ú	250	FA	ú
155	9B	>	187	BB	30	219	DB	Û	251	FB	û
156	9C	œ	188	ВС	1/4	220	DC	Ü	252	FC	ü
157	9D		189	BD	1/2	221	DD	Ý	253	FD	ý
158	9E	ž	190	BE	3/4	222	DE	Þ	254	FE	þ
159	9F	Ϋ	191	BF	Š	223	DF	ß	255	FF	ÿ

NOTE: Characters in bar codes used in keyboard applications may appear different on the host system, depending on regional keyboard layout and regional character interpretations and scanner configuration.

This is an entry from the Honeywell Scanning & Mobility Knowledge base. As part of our ongoing effort to improve and enhance the quality of the solutions, we ask you to inform us if you feel that we can improve on the content of this solution.

Support Portal: <u>www.hsmsupportportal.com</u> - Web form: <u>www.hsmcontactsupport.com</u> Knowledge Base: <u>www.hsmknowledgebase.com</u> - Phone: <u>www.honeywellaidc.com/locations</u>